
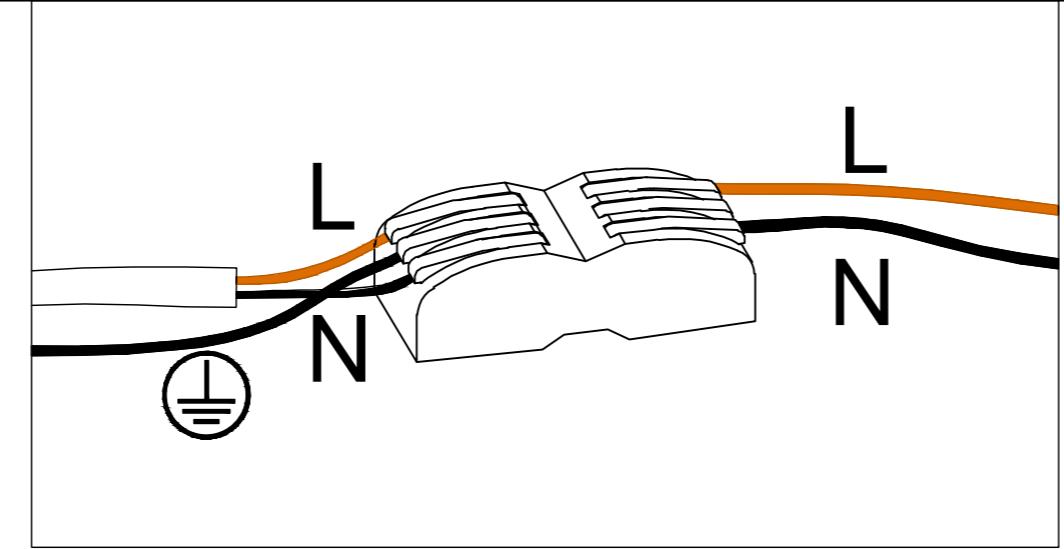
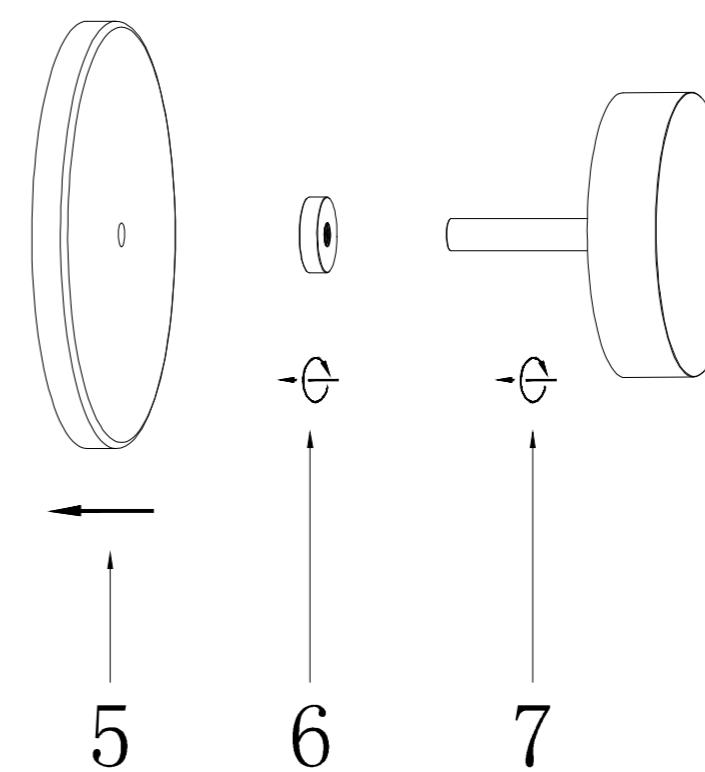
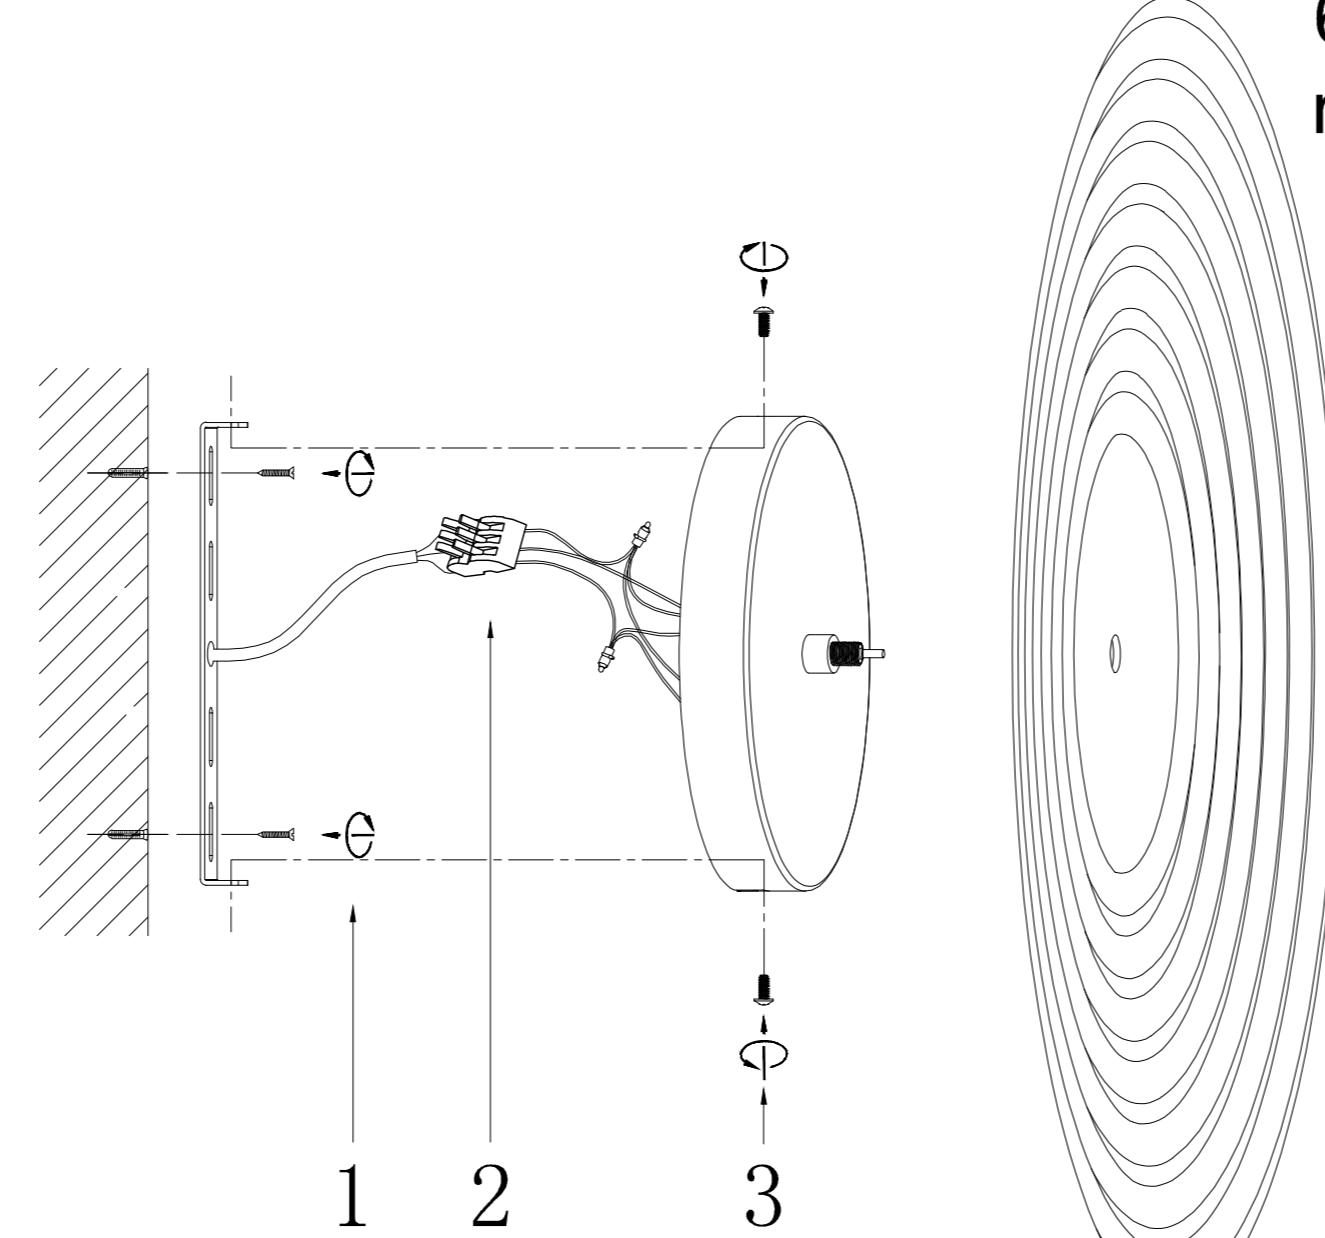


Power:

220-240V AC / 50/60Hz / 9W LED DIM

Check connections
and polarity220-240V **Driver** 26-40V

1. Pass the reserved wire through the hole in the hanging plate and fix the hanging plate with screws
2. Insert the power cord (L/N) into the terminal clip and press down the terminal clip buckle
3. Use screws to lock the disc and the hanging plate.
4. Put the acoustic discs into the holes of the disc column.
5. Put the marble/disc into the hole of the disc column.
6. Twist the disc into the disc column and press the marble/disc tightly.
7. Align the light source with the DC plug of the disc column and tighten it.

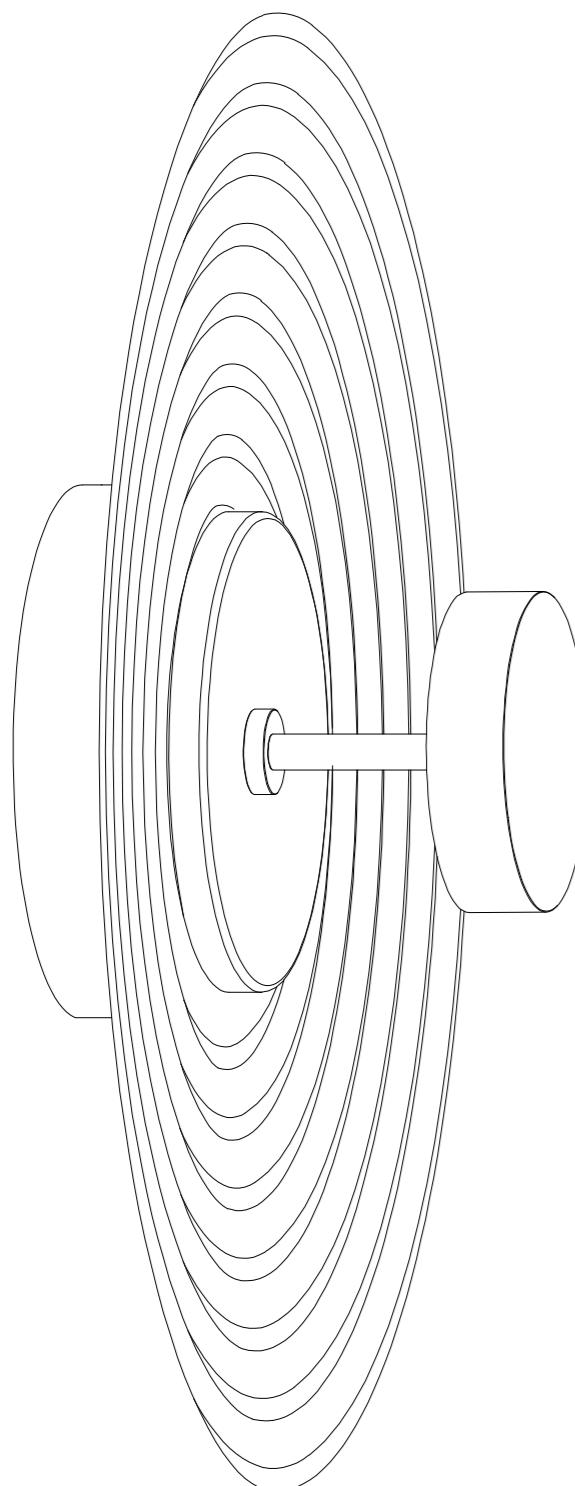

← 4